

FITMENT INSTRUCTIONS



Awning Bag - Condensed

1. Awning Bag Fitment – Tools, Fasteners & Materials

The tables below show the equipment, i.e. tools and fasteners required for fitting the awning bag to the awning assembly.

Tools Required:

<u>TOOL</u>	<u>PURPOSE</u>
<ul style="list-style-type: none">Rivet gun	To rivet 4 x Fender rivets through canvas bag into Awning Back plate.
<ul style="list-style-type: none">Drill	Drilling holes in canvas
<ul style="list-style-type: none">4.8 mm drill bit	Drilling holes in canvas

Items required: (Included)

<u>ITEM</u>	<u>QUANTITY</u>
<ul style="list-style-type: none">Awning Bag	1
<ul style="list-style-type: none">4.8x10 Fender Rivets	4

All rights reserved. No part of this document may be reproduced, translated, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instructions information carefully before installation.

Any damages, direct or incidental to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various applications and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip. If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

DISCLAIMER






WARNING

Always wear appropriate PPE (Personal protection equipment) when fitting this product. Although the mounting kit is designed to be DIY, if you have any doubts or concerns, contact an accredited fitment centre to carry out the work. Alu-Cab will not be liable for any injury to persons, and/or damage to products and/or vehicles.

2. Fitment of Awning

Step 1: Place the awning bag on a flat work bench or table and open the zip. Place awning assembly into the bag.

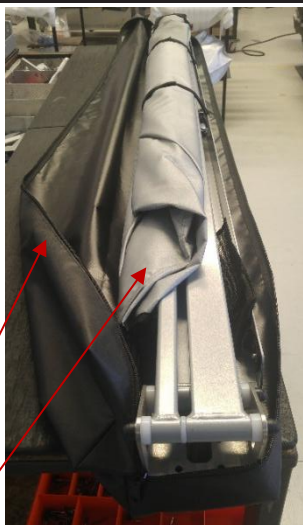


Top of awning assembly

Front of awning assembly

Step 2: Zip the awning bag up to close the bag as shown below. The stitching on the sides of the awning bag should line up with the awning backing plate as shown in the picture to the right.




Step 3: There are 4 pre-drilled 4.8mm holes in the awning back plate for the rivets, the drawing below shows their locations on the back plate. Use a 4.8 mm drill bit and a drill to drill through the awning bag into the 4 holes mentioned in step 4. *Use the drill in reverse to avoid drilling too far through the awning bag and possibly into the awning canvas inside the awning assembly.*

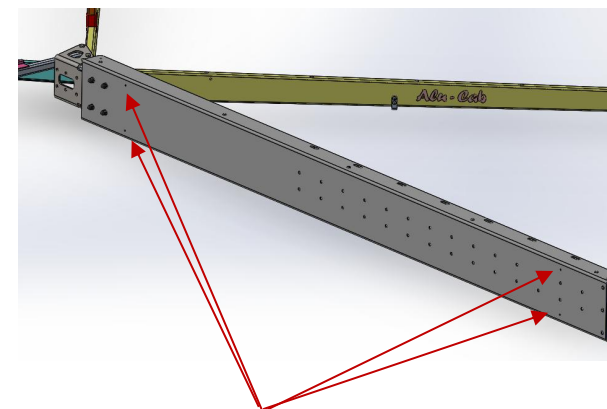

Pre-drilled 4.8mm holes

Step 4: Put the 4.8x10 Fender rivets into the holes and use the Rivet gun to rivet the awning bag to the awning backing plate.

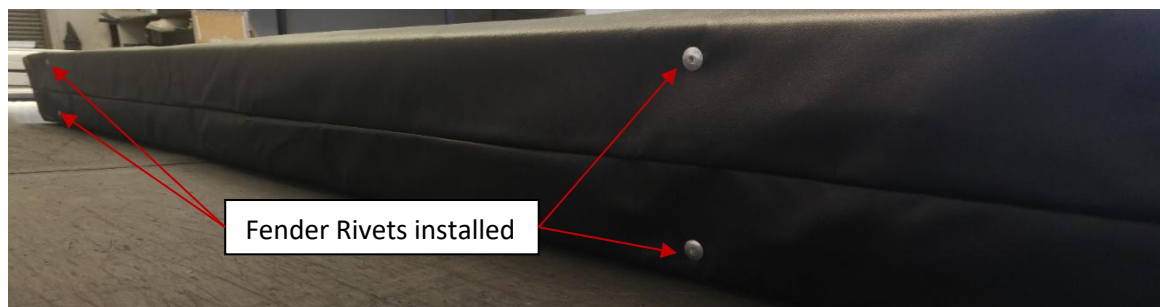

Fender Rivets installed

The awning is now complete and ready to be fitted to your vehicle.