


FITMENT INSTRUCTIONS

Alu-Cab™

Isuzu Double Cab Canopy Camper (2013-2019)

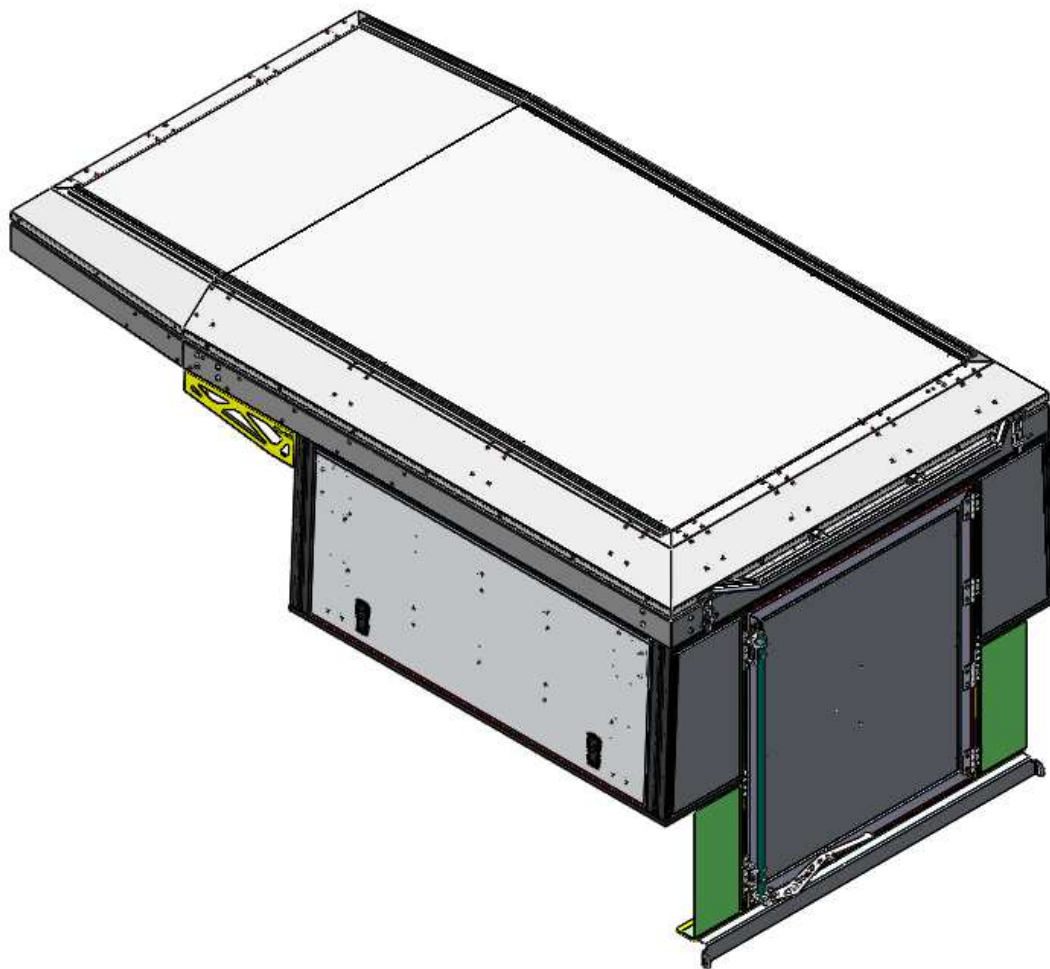

All rights reserved. No part of this document may be reproduced, translated, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instructions information carefully before installation.


Any damages, direct or incidental to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various applications and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip. If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

DISCLAIMER


Alu-Cab

1. Rear filler panel assembly.

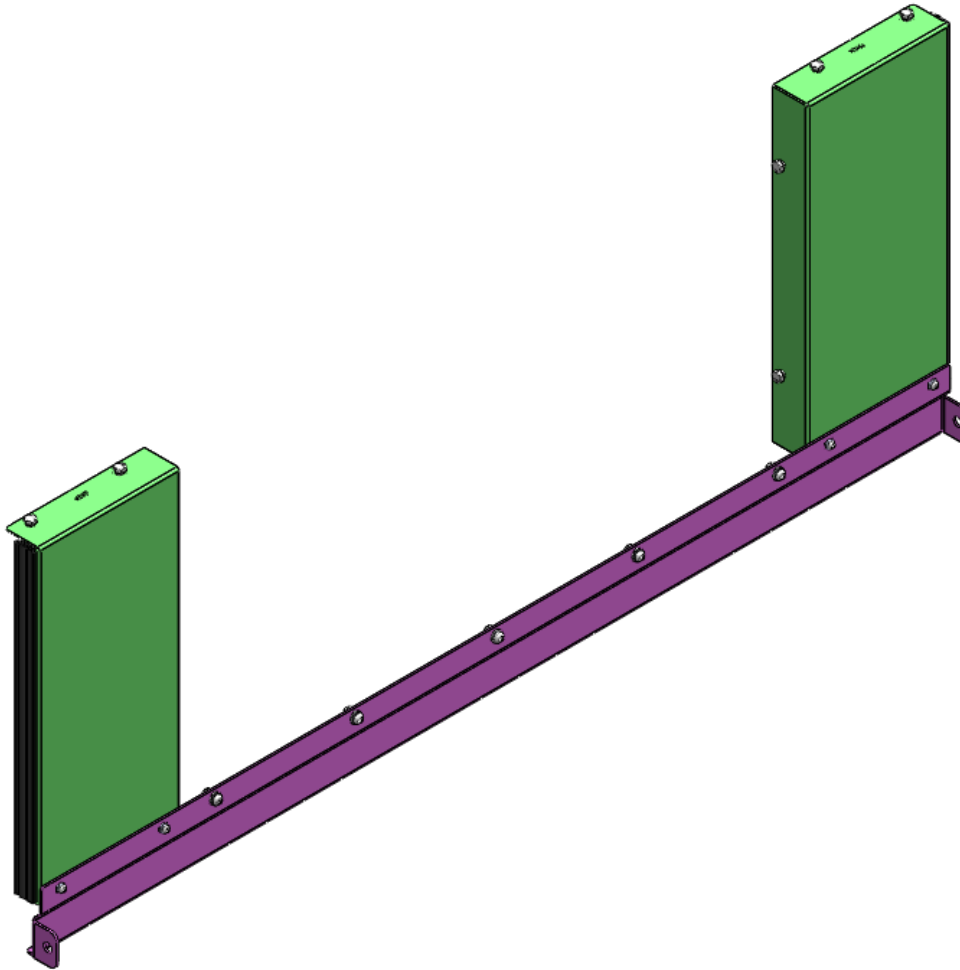


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	162-ISUZU-RER-BOT-COV-PLT-01	REAR BOTTOM COVER PLATE	01
2	162-ISUZU-INNER-BOX-LH-01	INNER BOX LH	01
3	162-ISUZU-INNER-BOX-RH-01	FILLER BOX RH	01
4	RUB-BS - (0.5m)	Side Rubber Seal	02
5	CAGE-M6	M6 CAGE NUT	04
6	HEX-M8x20	M8x20 HEX BOLT S/S	08
7	BHD-M8x16	M8x16 B/HD BOLT S/S	05
8	BHD-M6x16	M6x16 B/HD BOLT S/S	04
9	NUT-M8	M8 HEX NUT S/S	05
10	NY-M8	M8 NYLOC NUT S/S	08
11	NCAP-M8	NUT CAP-08mm	08
12	SW-M8	M8 SPRING WASHER S/S	05
13	SW-M6	M6 SPRING WASHER S/S	04
14	FFW-M8	M8x20mm OVERSIZED WASHER S/S - DIN 9021	05
15	FW-M6	M6x12mm FLAT WASHER S/S - DIN 125	04
16	FW-M8	M8x16mm FLAT WASHER S/S - DIN 125	08


2. Fit lower door frame to filler panel assembly as shown.

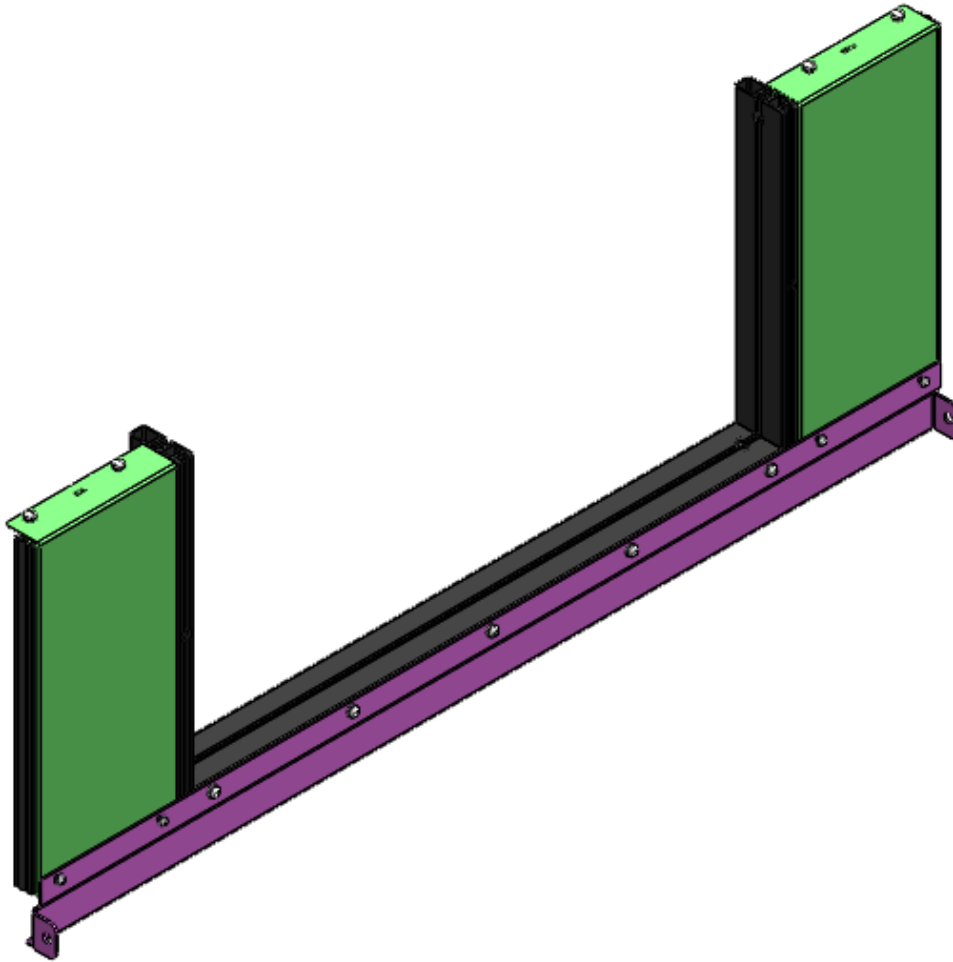


3. Rear bottom support bracket.

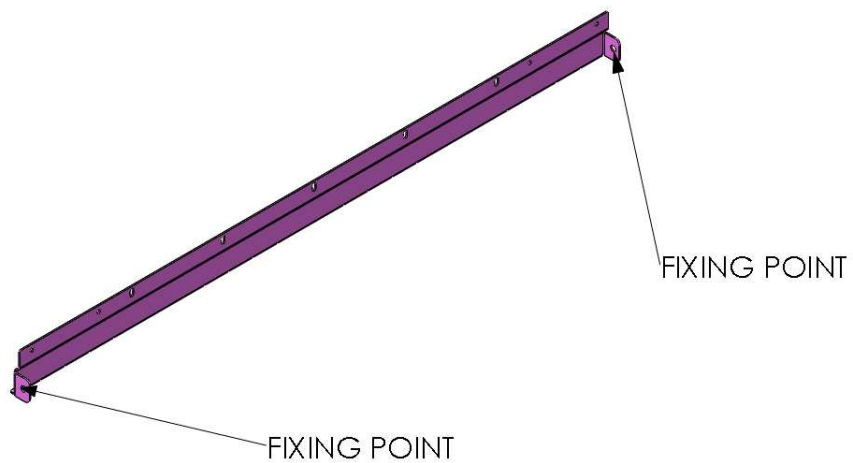

3. Mount filler panel assembly to load bin as shown.

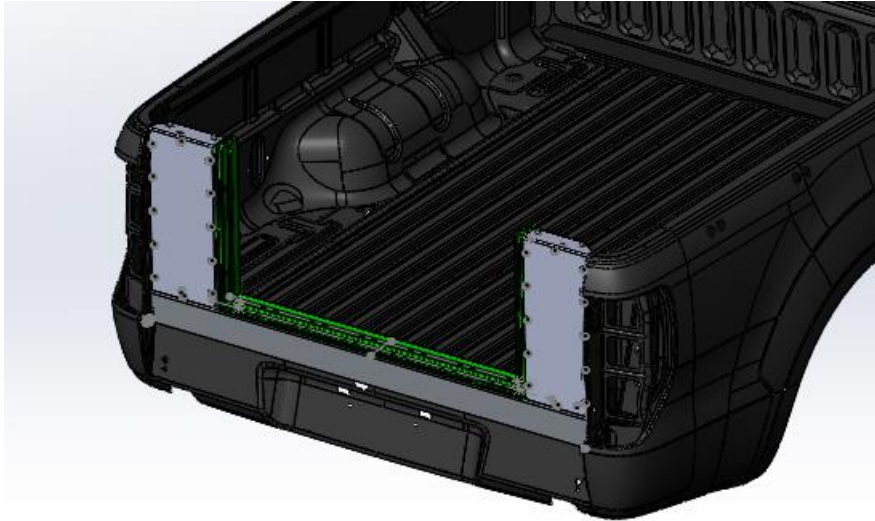


4. Then mount canopy camper base unit on top of load bin.

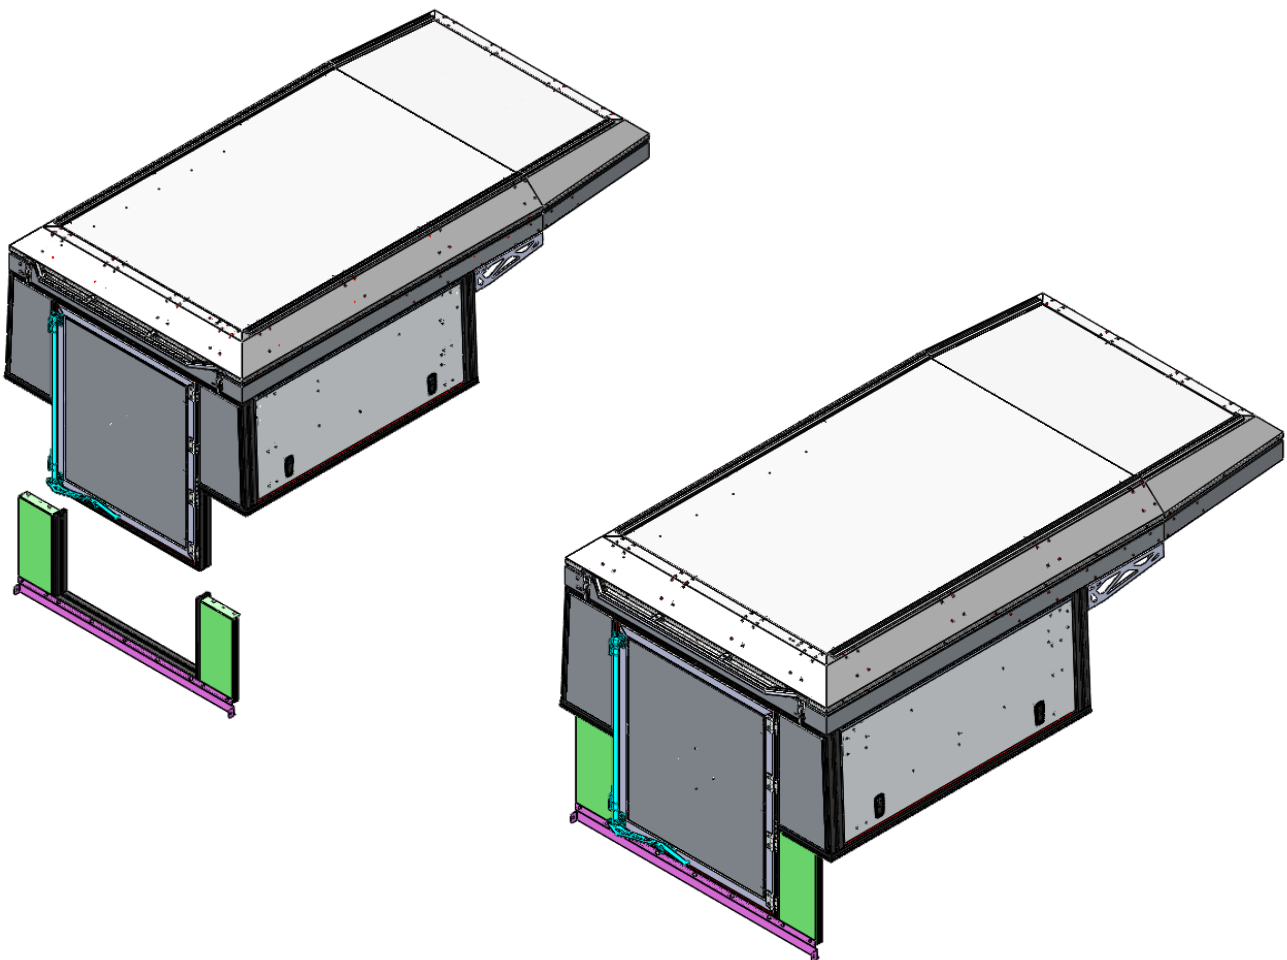


5.1. Connect rear filler panel assembly and base unit as shown.


OUTER MOUNTING ON BOTH JOINTS

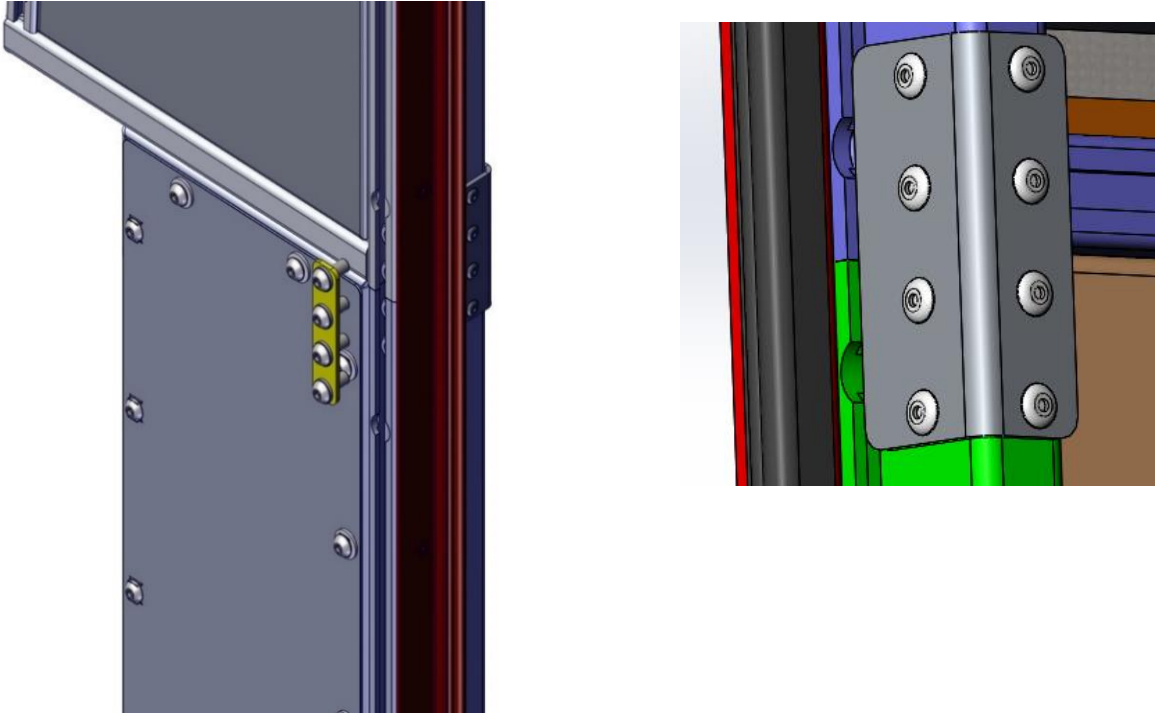


5.2. INNER MOUNTING ON BOTH JOINTS

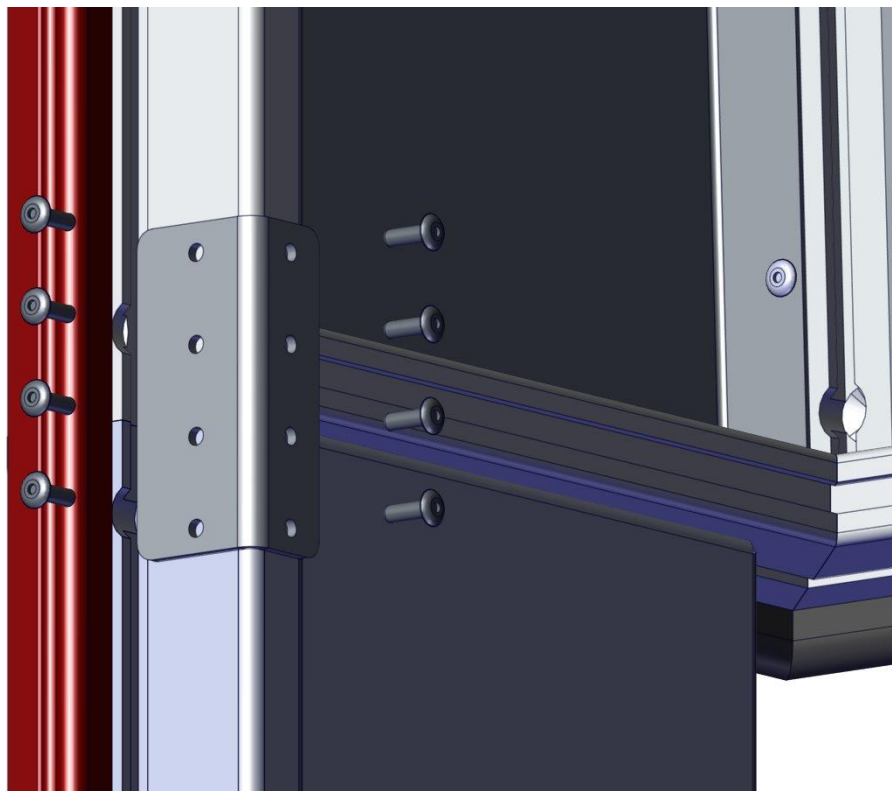


6. Fit rear door rebate with Ø4.8 x15 sealed countersink rivets as shown.

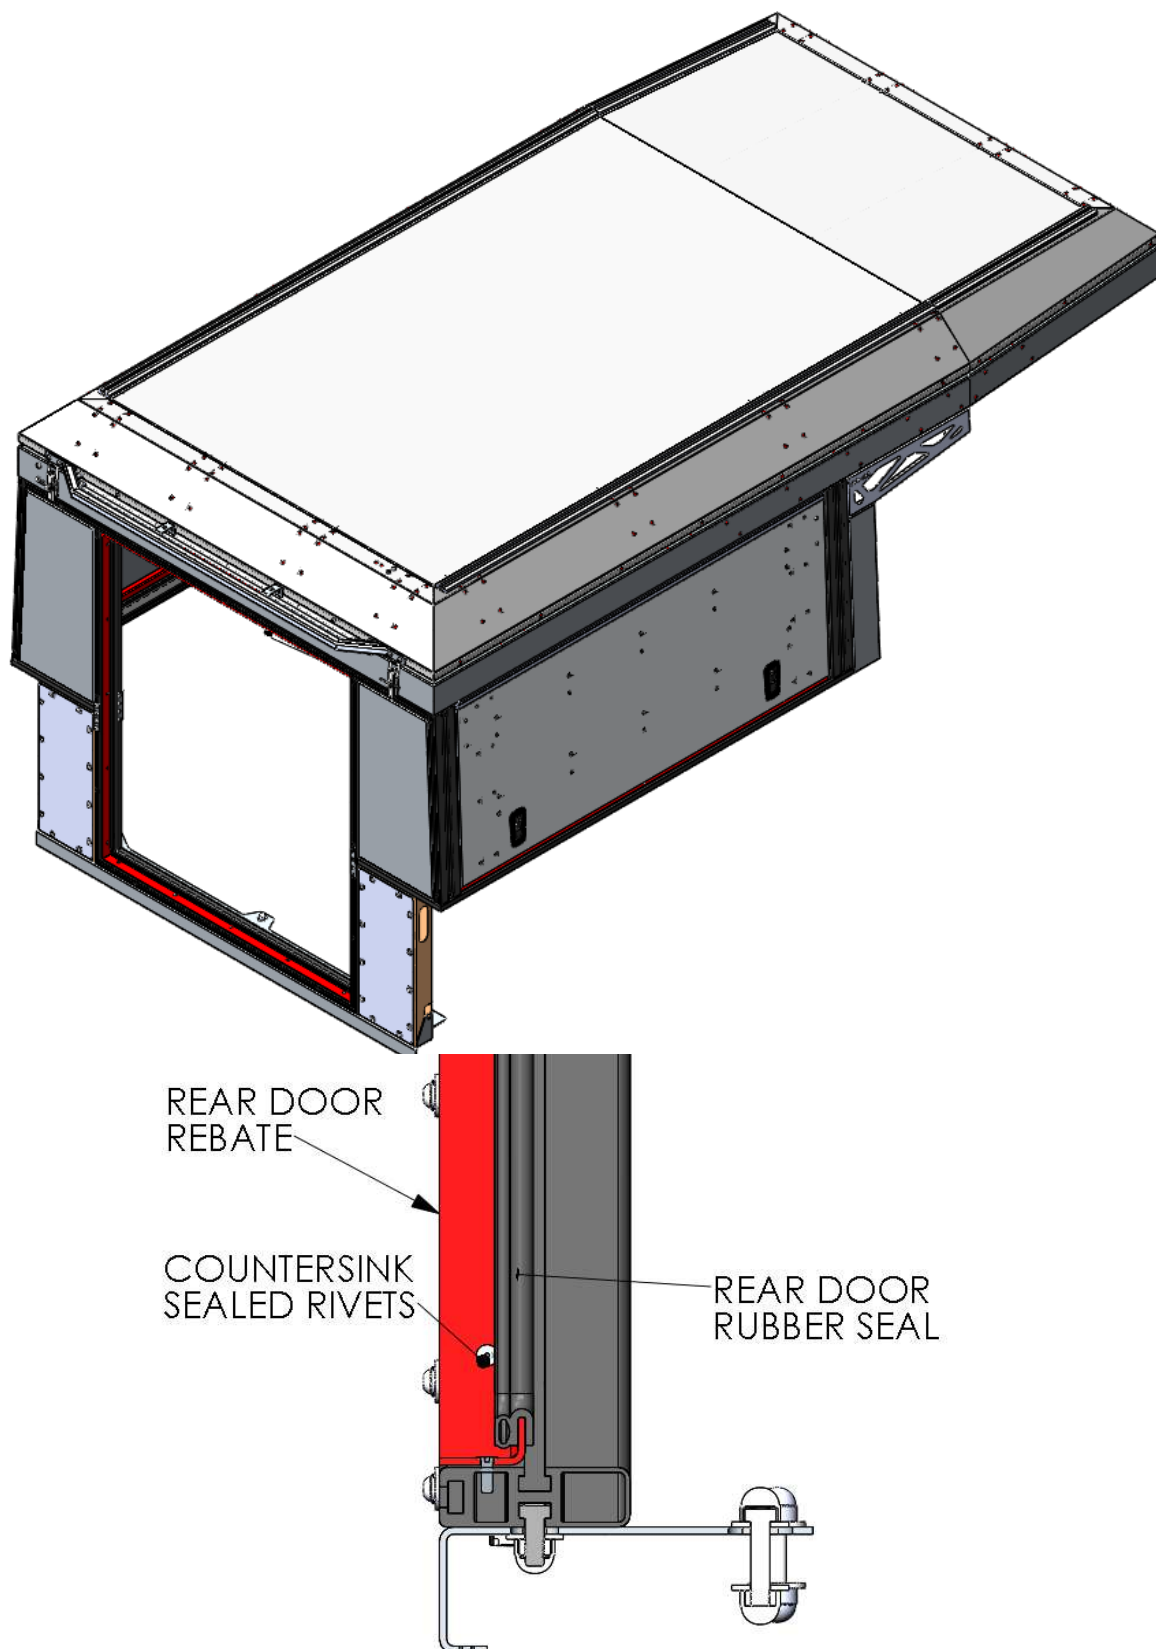

7. Fit rear door by mounting 4 x Butt hinges to camper frame as shown. Centre rear door, top to bottom and the hinge centres left to right. Also mount the door lock to the camper frame.

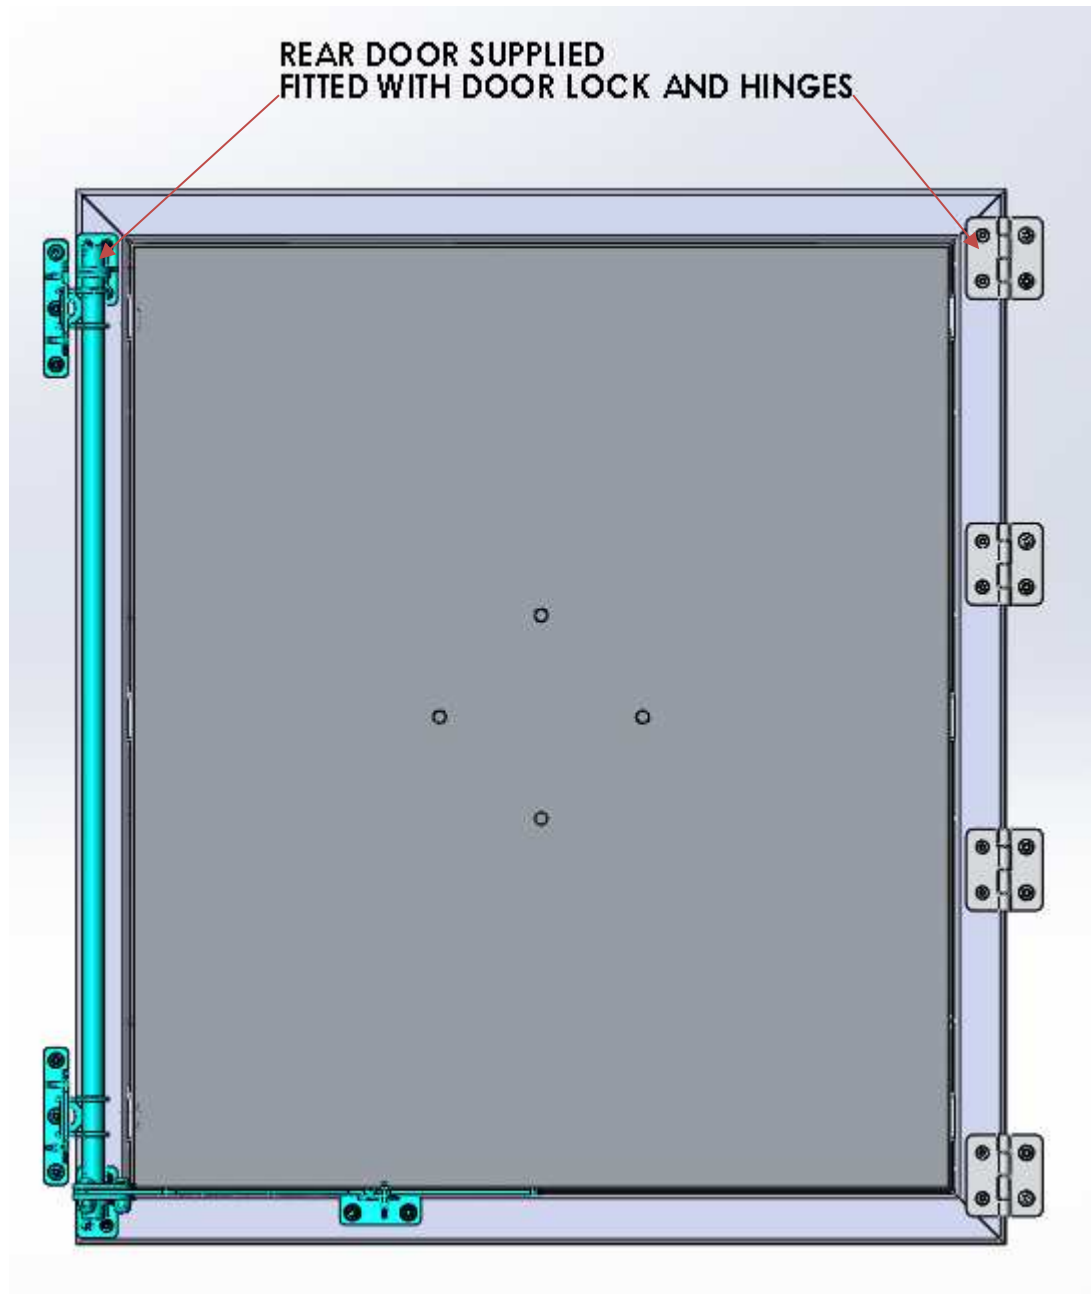

8. Attach hinges and lock to camper frame.

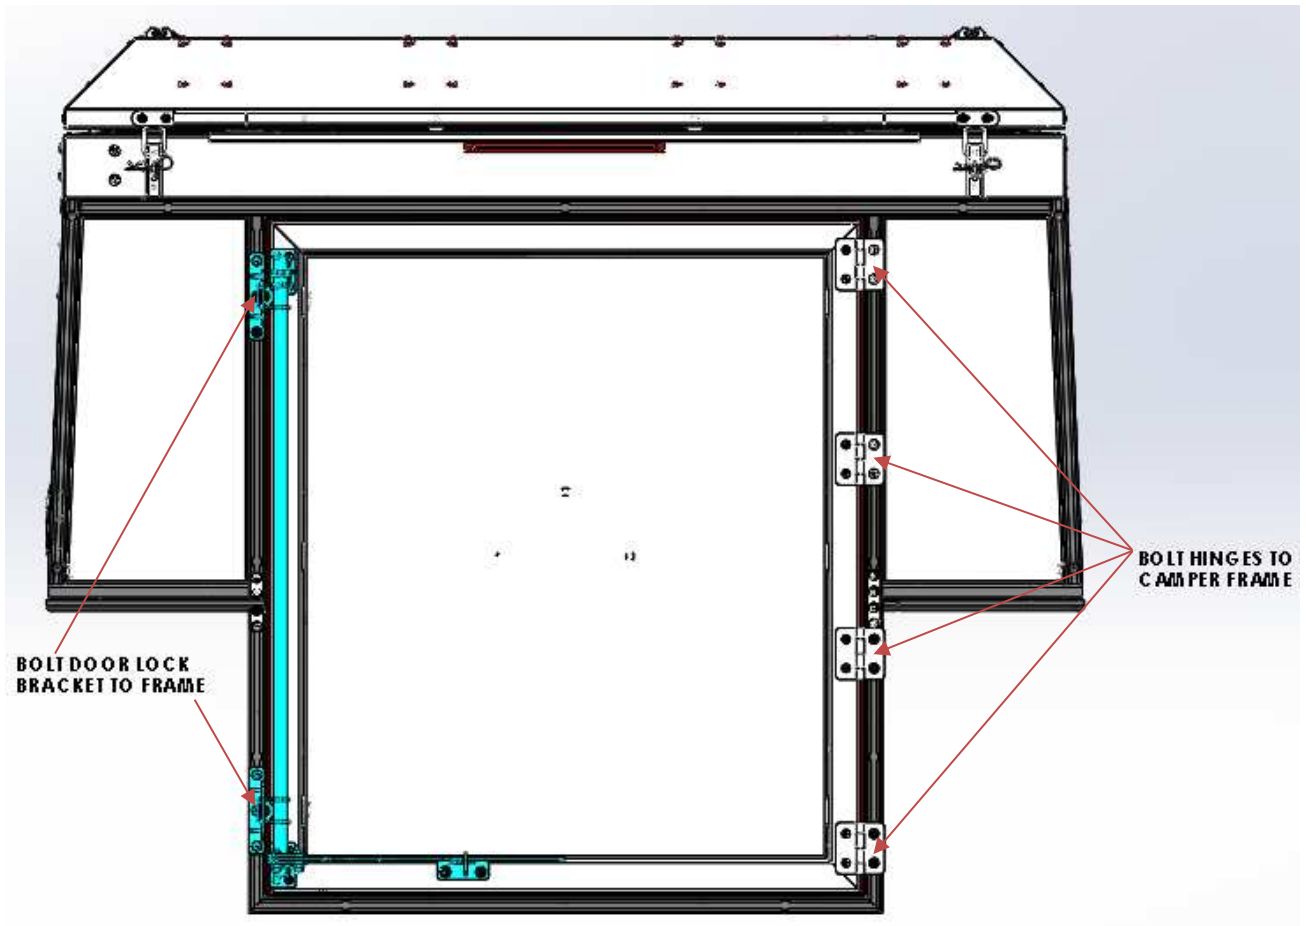

1. Canopy Camper Fitment – Tools, Fasteners & Materials

The tables below show the equipment, i.e. tools and fasteners required to start the canopy fitment.

1.1. Tools Required:


<u>TOOL</u>
• Ratchet
• T-40 Spline Socket
• 13mm Socket
• 13mm Ring Flat Spanner



WARNING

Always wear appropriate PPE (Personal protection equipment) when fitting this product. Although the mounting kit is designed to be DIY, if you have any doubts or concerns, contact an accredited fitment centre to carry out the work. Alu-Cab will not be liable for any injury to persons, and/or damage to products and/or vehicles.

2. Front mounting brackets LH & RH Assemblies. See BOM below for each assembly.

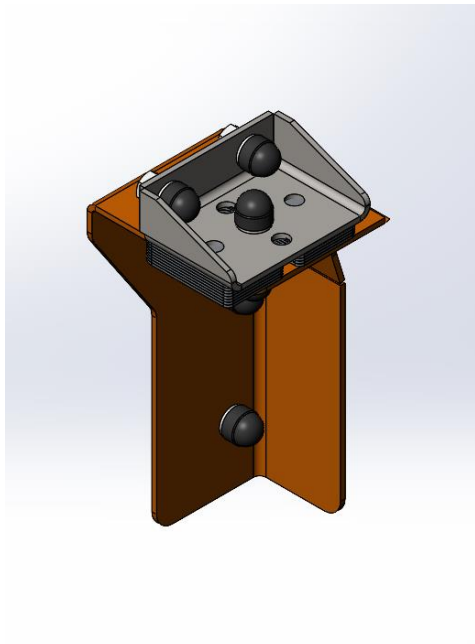



LHS

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	162-ISUZU-FNT-MNT-BRKT-LH-01	FRONT MOUNTING BRACKET LH	01
2	AC001-CAN-MNT-BRKT-01	CANOPY MOUNTING BRACKET	01
3	AC001-STD-SHIM-01	STANDARD SHIM 01	08
4	HEX-M8x20	M8x20 HEX BOLT S/S	02
5	FW-M8	M8x16mm FLAT WASHER S/S - DIN 125	06
6	NY-M8	M8 NYLOC NUT S/S	03
7	NCAP-M8	NUT CAP-08mm	06
8	HEX-M8x30	M8x30 HEX BOLT S/S	03
9	SW-M8	M8 SPRING WASHER S/S	02

RHS


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	162-ISUZU-FNT-MNT-BRKT-RH-01	FRONT MOUNTING BRACKET RH	01
2	AC001-CAN-MNT-BRKT-01	CANOPY MOUNTING BRACKET	01
3	AC001-STD-SHIM-01	STANDARD SHIM 01	08
4	HEX-M8x20	M8x20 HEX BOLT S/S	02
5	FW-M8	M8x16mm FLAT WASHER S/S - DIN 125	06
6	NY-M8	M8 NYLOC NUT S/S	03
7	NCAP-M8	NUT CAP-08mm	06
8	HEX-M8x30	M8x30 HEX BOLT S/S	03
9	SW-M8	M8 SPRING WASHER S/S	02

3. Rear mounting brackets LH & RH Assemblies. See BOMs below for each assembly.

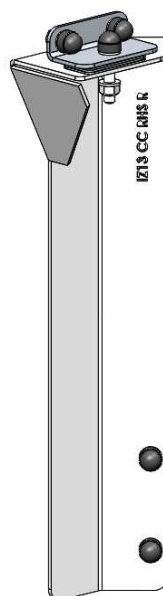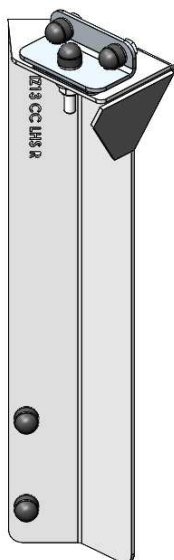


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	162-ISUZU-RER-RH-MNT-BRKT-01	REAR RH MOUNTING BRACKET	01
2	162-ISUZU-RER-MNT-GUSS-01	REAR MOUNT GUSSET	01
3	AC001-LD-BAR-FOOT-LP-01	LOAD BAR FOOT LOW PROFILE	01
4	FW-M8	M8x16mm FLAT WASHER S/S - DIN 125	06
5	HEX-M8x30	M8x30 HEX BOLT S/S	02
6	SW-M8	M8 SPRING WASHER S/S	02
7	NCAP-M8	NUT CAP-08mm	05
8	HEX-M8x20	M8x20 HEX BOLT S/S	02
9	NY-M8	M8 NYLOC NUT S/S	03
10	AC001-STD-SHIM-02	SHIM PLATE 2	04
11	HEX-M8x40	M8x40 HEX BOLT S/S	01
12	FFW-M8	M8x20mm OVERSIZED WASHER S/S - DIN 9021	01
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	162-ISUZU-RER-LH-MNT-BRKT-01	REAR LH MOUNTING BRACKET	01
2	AC001-LD-BAR-FOOT-LP-01	LOAD BAR FOOT LOW PROFILE	01
3	162-ISUZU-RER-MNT-GUSS-01	REAR MOUNT GUSSET	01
4	FW-M8	M8x16mm FLAT WASHER S/S - DIN 125	05
5	HEX-M8x30	M8x30 HEX BOLT S/S	02
6	SW-M8	M8 SPRING WASHER S/S	02
7	AC001-STD-SHIM-02	SHIM PLATE 2	04
8	HEX-M8x20	M8x20 HEX BOLT S/S	02
9	NCAP-M8	NUT CAP-08mm	05
10	NY-M8	M8 NYLOC NUT S/S	03
11	HEX-M8x40	M8x40 HEX BOLT S/S	01
12	FFW-M8	M8x20mm OVERSIZED WASHER S/S - DIN 9021	01

4. 2 x Centre mounting brackets

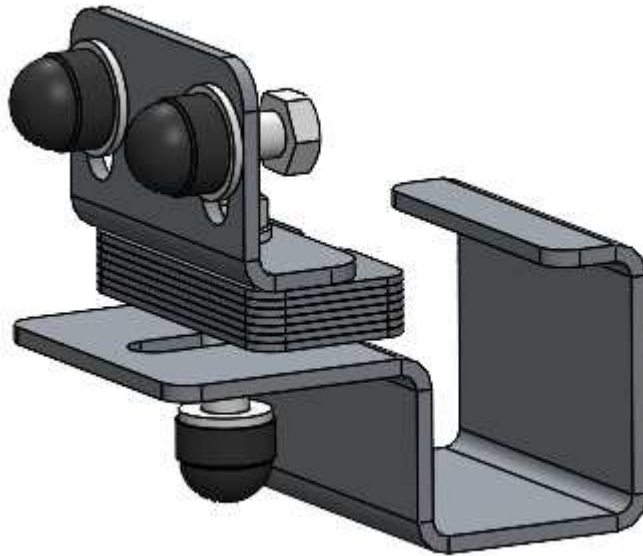

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	212-MNT-BRKT-02	MOUNTING BRACKET 02	01
2	NY-M8	M8 NYLOC NUT S/S	03
3	HEX-M8x20	M8x20 HEX BOLT S/S	02
4	NCAP-M8	NUT CAP-08mm	03
5	FW-M8	M8x16mm FLAT WASHER S/S - DIN 125	02
6	FFW-M8	M8x20mm OVERSIZED WASHER S/S - DIN 9021	02
7	162-ISUZU-CNT-MNT-BOT-BRKT-01	CENTRE MOUNT BOTTOM BRACKET	01
8	AC001-STD-SHIM-02	SHIM PLATE 2	07
9	HEX-M8x40	M8x40 HEX BOLT S/S	01

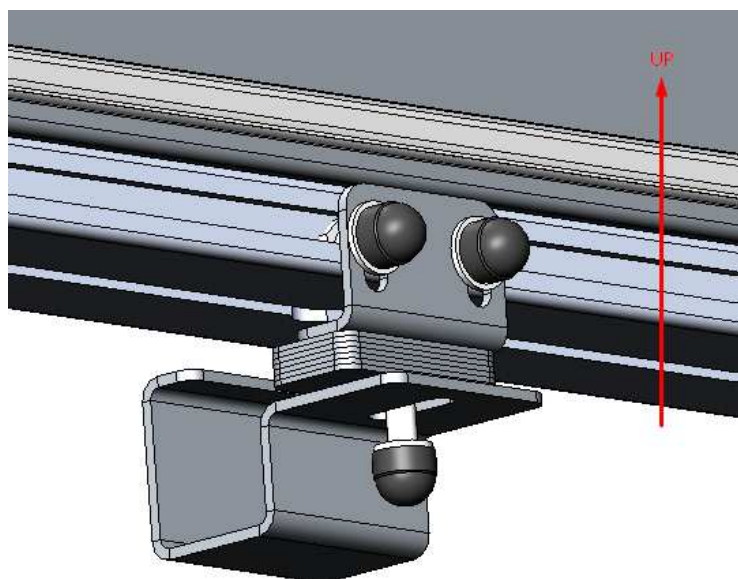

5. Images showing rear mounting position of Canopy Camper

