

FITMENT INSTRUCTIONS

Alu-Cab™



Side Window Box Recovery Molle Plate Fitment Instructions for Land Cruiser 76 series

All rights reserved. No part of this document may be reproduced, translated, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instructions information carefully before installation.

Any damages, direct or incidental to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various applications and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip. If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

DISCLAIMER

Alu-Cab

76 Series Landcruiser Window Box Recovery Molle Fitment – Tools, Fasteners & Materials

The tables below show the equipment, i.e. tools and fasteners required to install the Recovery Molle Plate to the Landcruiser 76 series side boxes.

1.1. Tools & Items Required:

TOOLS
4 mm Allen key
10 mm spanner/socket
Ratchet (Optional)

1.2 Fasteners supplied: (Included with Side Boxes)

ITEM	QTY
M5 x 25 mm Button Head Bolt	5
M5 Nyloc Nuts	10
M5 Plastic Nut Caps	5
M5 Flat washers	10

1.3 Hardware Required:

DESCRIPTION	QTY
Recovery Molle Plate	1
Rubber Mat	1

**IMPORTANT
NOTICE**



Please ensure to lay out all parts provided on a table or flat surface in order to check that all required parts are accounted for and prevent potential frustration at a later stage.

LHS RECOVERY MOLLE PLATE:


STEP 1:

Please confirm that all the required parts and fasteners are accounted for and lay them out on a table or flat surface.



STEP 2:

Fasten a M5x25mm bolt with flat washer and nut to each of the holes of the backing plate as seen below.

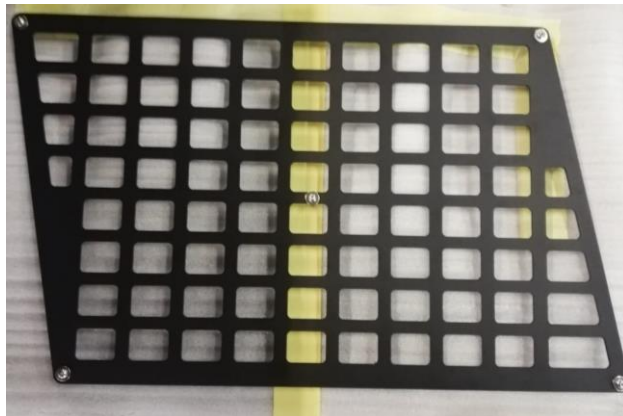

Ensure to leave +/- 1 mm of play on each of the bolts as this will allow the backing plate to be fitted more easily.

STEP 3:

You can now fasten the molle plate to the window box as seen below.




When correctly fitting the Molle plate to the box, the spacing between the edge of the molle plate and the edge of the box should be uniform as seen below.





STEP 4:

Place the Rubber mat supplied with the kit just under the molle plate as seen below

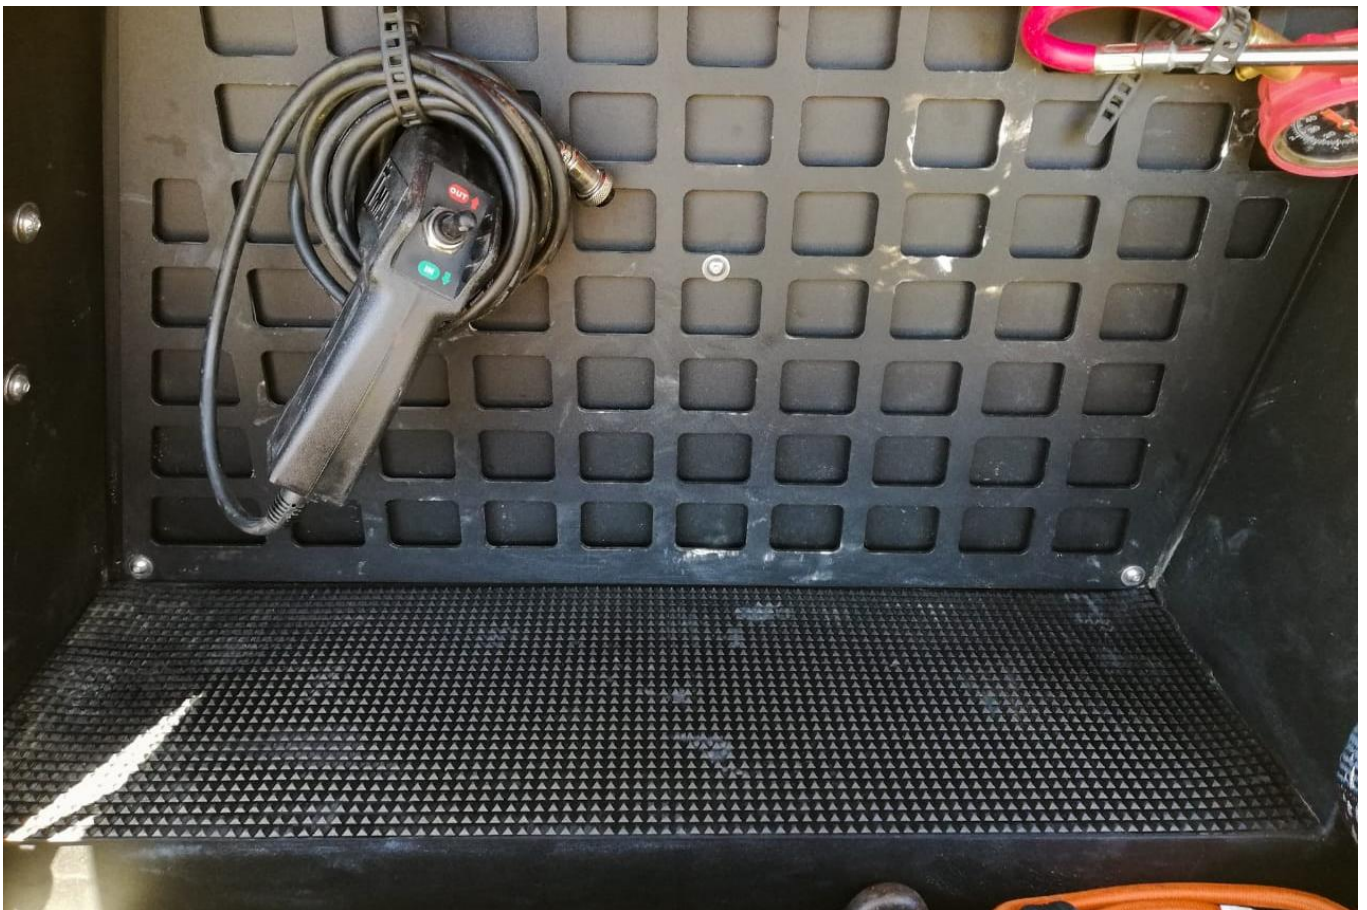

Once done your box should look as follows.



Once the backing plate is securely bolted down, and the rubber matting is in place, you will have successfully installed the recovery molle plate kit to your window box.

Now all that is left to do is to go test it.